





HP Tuners 2011 - 2019 Powerstroke Flash Instructions


1. Visit <https://www.hptuners.com/downloads/> and download the latest version of VCM Suite (Beta)
2. While waiting, download the tune file from your email (typically it saves in your downloads folder)
3. Open the VCM Editor Beta
4. Select the blue info button, and again in the smaller window. This will perform any update available for the MPVI2

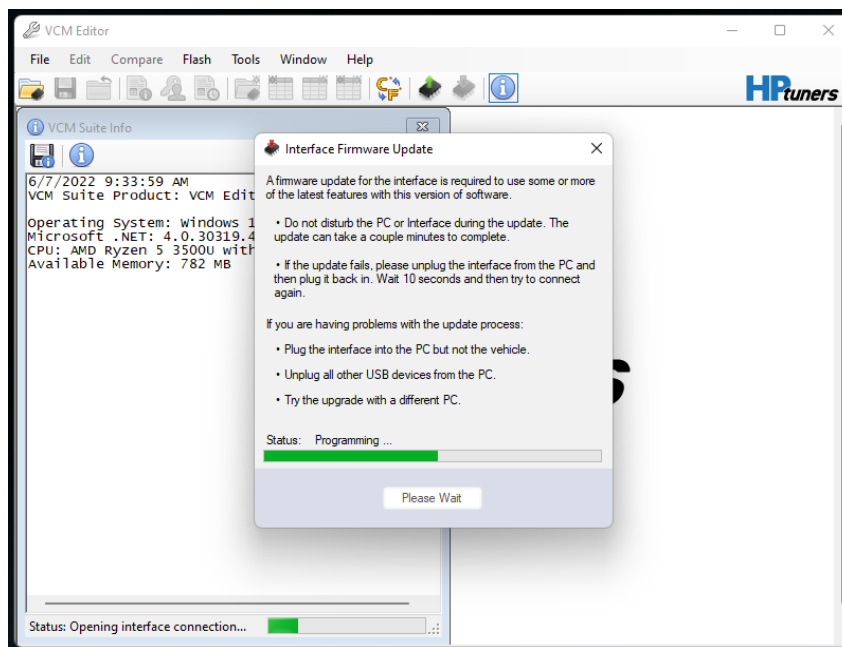

5. Once completed, select the help tab, then resync interface. Once resynced the device should show credits have been added, if purchased.

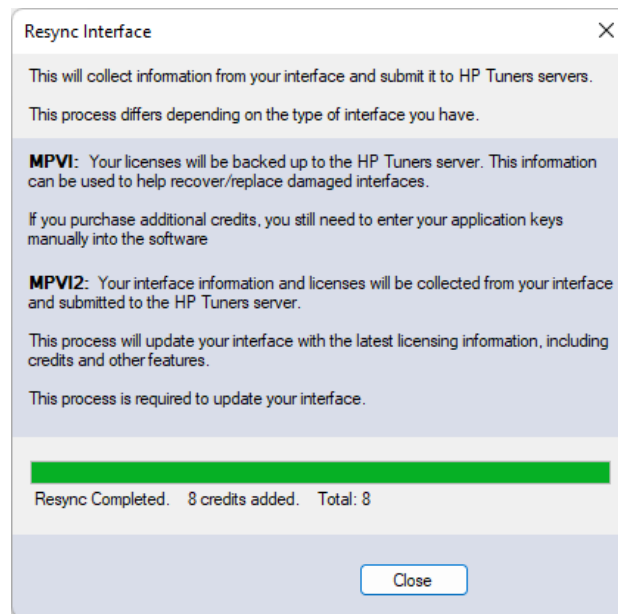


6. With the MPVI2 set up now complete, turn the truck to the on position
7. Select the Read Vehicle Icon (microchip with green up arrow), then Read in the smaller window

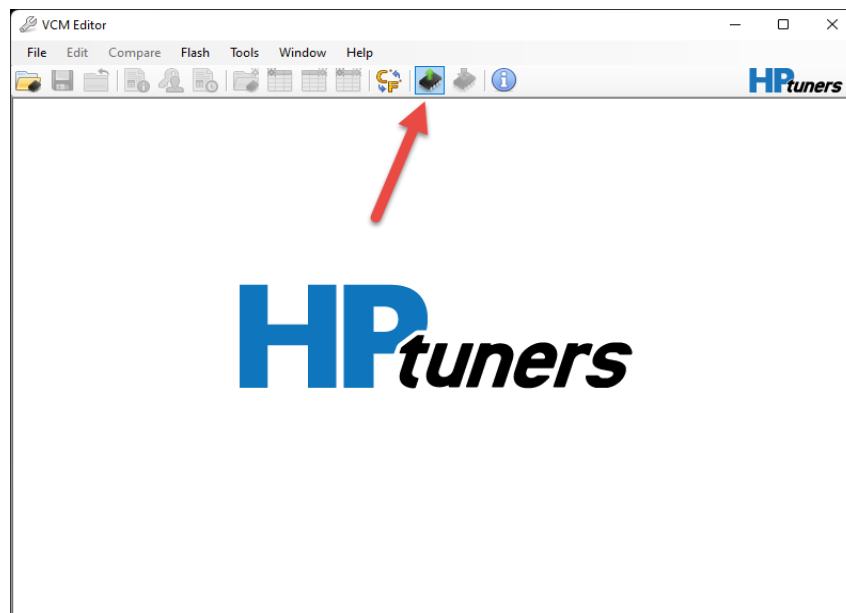


8. Enter the vehicle VIN number
9. Once the read is complete save the file somewhere for safekeeping.
10. With the truck still in the ON position, open the tune file
11. Now select the Write Vehicle Icon (microchip with red down arrow)



12. Select Show License Options and select the specific icon to apply the credits, select yes to confirm

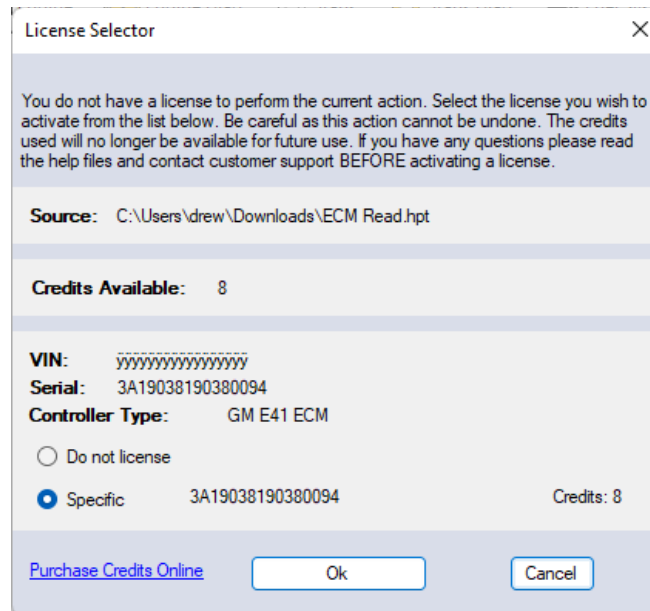

13. Make sure “Write Entire” is selected in the dropdown and then click write (Flash time can take 5-12 minutes)

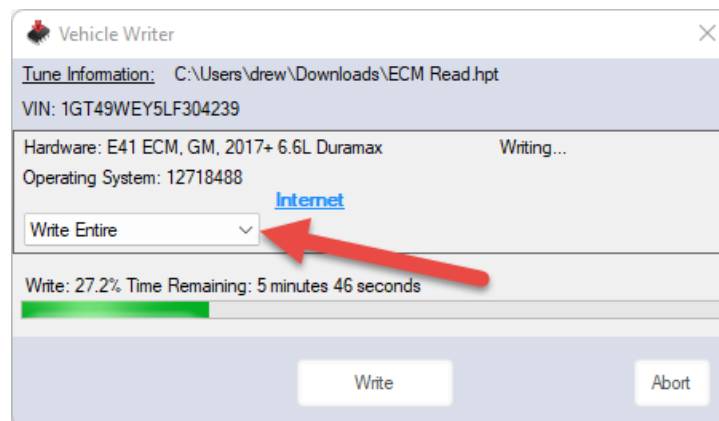

14. Once complete, cycle the key and start the truck